



CONNECT


USER GUIDE



Connect User Guide

Getting to know the Pen	4
The Device - LED Indicator	5
The App	6
Hints & Tips	10

GETTING TO KNOW THE PEN

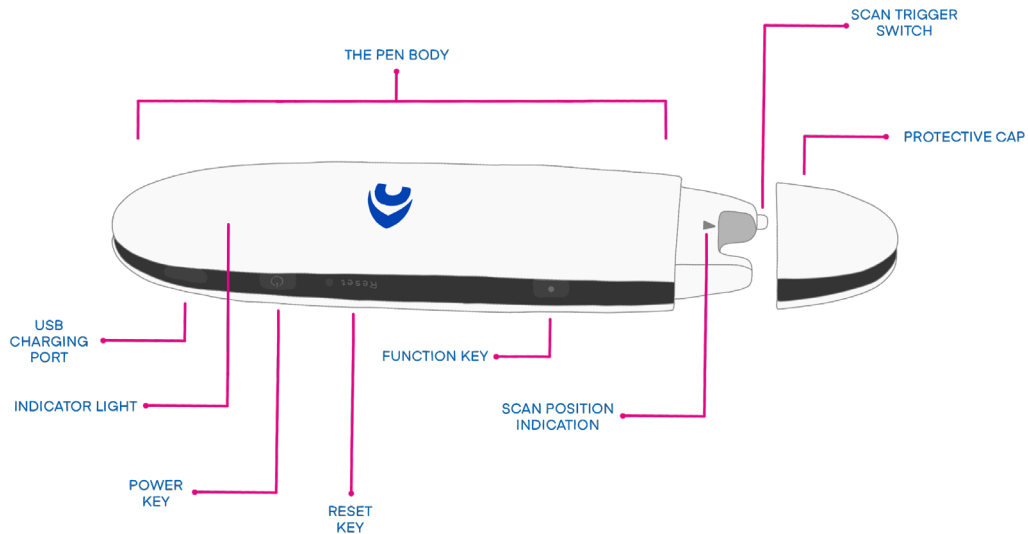



TO TURN ON:

Press and hold the power key for 5 seconds

TO TURN OFF:

Press and hold the power key for 4 seconds

TO PUT IN SLEEP MODE:

Press power button briefly

TO GET OUT OF SLEEP MODE:

Press any button briefly to power on



GREEN LIGHT

When flashing, it indicates the pen is booting up



RED LIGHT

When flashing, it indicates the pen has a low battery

When solid, it indicates the pen is charging



YELLOW LIGHT

When solid, it indicates the pen's battery is charged



BLUE LIGHT


When flashing, it indicates the pen is connecting to a device

When solid, it indicates the pen is connected

THE APP


AVAILABLE IN THE APPLE APP STORE AND GOOGLE PLAY STORE

SYSTEM REQUIREMENTS ARE: iOS 10 or Android 5

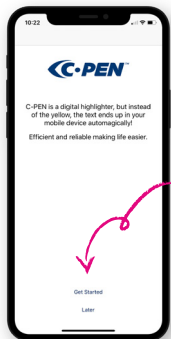

Once the Connect app has downloaded to your device, open up the app and select 'Get started'.

The message "Turn on" will appear, (by pressing the power button for a few seconds, until the indicator light is flashing green and after a while blue) this will pair the device and pen.

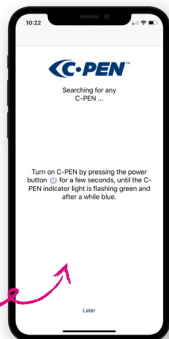


Once the pen has paired with the App, the screen will change and the message "Ok, Great!" will appear. Click onto the message and it will take you to the work space where you can scan away.






Once you have clicked "Ok, Great!" it will take you to this main work space screen where you can start to scan.

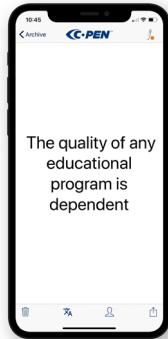

After scanning text it will appear in the middle of the screen.

Tap the text on the work space to see more features, you will find functions like **read, share, translate, and edit.**

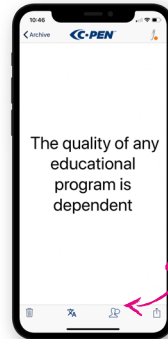

To hear the scanned text aloud tap the 'Read out loud' icon which you will find next to the translation icon.

When you see a speech bubble pop up next to the icon, the text will be read aloud


THE APP - CONTINUED



In order to translate the text, click onto the translation icon. Select your preferred language from the list in the lower right corner of the app.

To hear the text aloud in your chosen language, select the icon with the speech bubble.

To change languages you can click each side and choose from the following: **Chinese, Danish, Dutch, English, French, German, Italian, Norwegian, Russian, Spanish, and Swedish**

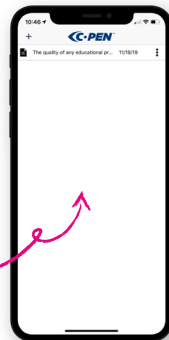


While on the main screen, if you click on the trash can you will be able to clear the last text you scanned. Clearing this text will also remove it from the archive.

Clicking on 'Archive' will take you to everything you have scanned. To access file options, you click on the three dots. When choosing 'share' you can upload your file to cloud drive or share with a messenger app. Clicking 'delete' will erase the saved file.



In order to save a file, click onto the share icon which you will find at the bottom right of the app.

You can upload a text file to a cloud drive, share it with a messenger app, or send in an email.

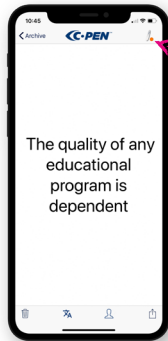

In the top right corner, you will find the icon that takes you to settings. Tap scan language to select your preferred language (Chinese, Danish, Dutch, English, French, German, Italian, Norwegian, Russian, Spanish, Swedish). To select speech language tap 'text-to-speech language'. Unless changed the speech language will synchronise with the scan language.

OTHER SETTINGS:

SCAN MODE: Set whether each piece of scanned text should be replaced or appended to the existing text

SCAN SEPARATOR: Inserts a character or command between each scan, you have a choose of 'none', 'space', 'Tab' or 'Line feed'

BUBBLE HELP: Makes coaching information reappear after each scan

AUTO SPEECH: Your scanned text will automatically be read out loud, you can adjust the 'Speech speed' and 'Speed pitch'

PEN FUNCTION KEY ACTION: Can trigger last scan to be read out loud, or it can trigger workspace to be shared


PEN SLEEP TIME: Set time for the pen to go into sleep mode

PEN SHUTDOWN TIME: Set time for the pen to auto shut down

HINTS & TIPS

CONNECTIVITY

When connecting for the first time make sure only one device is within Bluetooth range.

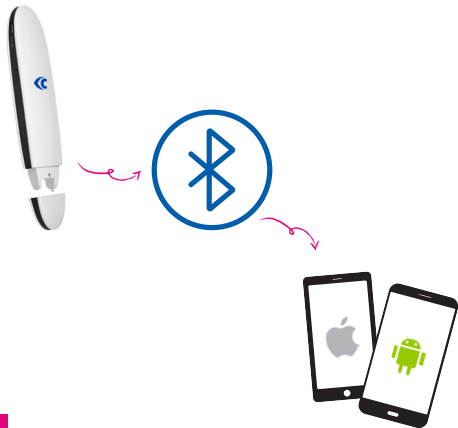

You can use a ruler as a guide under any text aid when scanning the sentence.

Name: _____

Date: _____

Circling and Writing Possessive Pronouns Worksheet

A possessive pronoun is a word that may take the place of a possessive noun. Ex. his, her, our, yours, theirs, its, mine.

Directions: Read each sentence. Circle the possessive pronoun.

1. You can have one of mine!

Using a ruler can help those with limited motor skills

2. Your new bag looks expensive.



3. Our favorite food is spaghetti.

6. My house is located on a hill.

Directions: Write a sentence with each possessive pronoun given below.

7. its- _____

8. your- _____


9. his- _____

TOP TIP:
Maintain a steady
hand when scanning




In order to scan any text, the Connect Pen needs to be 2cm away from the start of a sentence.

To start scanning, the text needs to be within the middle of the plastic bracket, making sure the nib is pressed down and the camera light is highlighting the text.

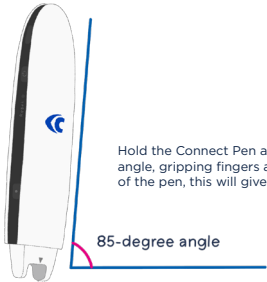

Hold the Connect Pen at an 85-degree angle, gripping fingers around the base of the pen, this will give you a better grip.

85-degree angle

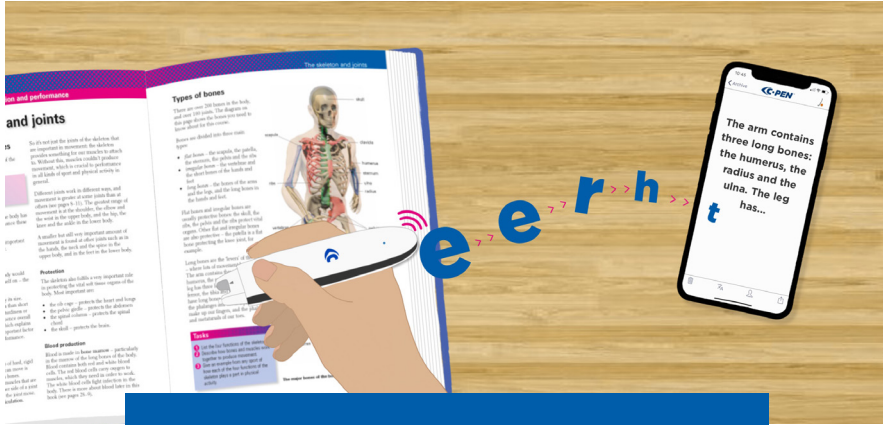


www.cpenconnect.co.uk

[@scanningpens](https://twitter.com/scanningpens)